



Dell Inspiron 1564 CD Drive Replacement

Accessing and removing the old CD Drive to replace it with a new one.

Written By: Megan Nelson



INTRODUCTION

Removing and replacing the CD Drive.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — CD Drive



- Using a Phillips #0 driver, locate screw on device near the CD Drive and remove.

Step 2

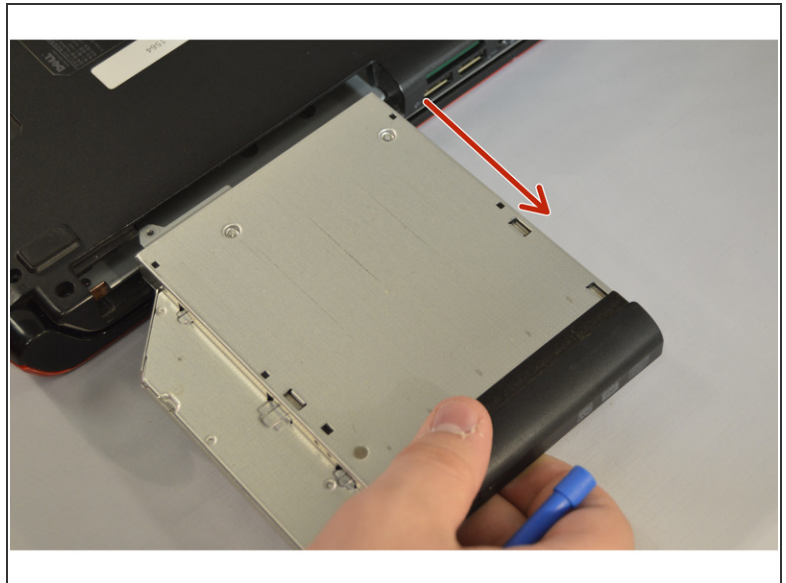

- With plastic opening tool pry CD Drive away from device gently.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 12:57:02 AM.

